

Install UCP Software for laser cutter time estimation

Download the UCP software from the daneils FTP

<ftp://files.daniels.utoronto.ca/Groups/Laser%20Cutter%20Software/>



Select PLS Platform to Install



install both Universal control panel and Printer Drivers



Select PLS 6.150D for install

Once UCP drivers and software is installed you can print or plot with power and speed settings as you would at the laser cutter to estimate cutting times. See Daniels laser cutter manual for in depth walk through.